

- **3 or 5 minute fixed or 10 minute adjustable delay**
- **Works with anticipator thermostats**

MODE OF OPERATION

With application of power, the load is energized. When the thermostat opens or there is a loss of power, the load is de-energized and the delay period begins. The compressor will not start again during the delay period.

SPECIFICATIONS

Input

- **Voltage:** 18-30 VAC
- **Frequency:** 50/60 Hz

Output

- **Output Ratings:**
 - **Maximum:** 1.5 amps
 - **Minimum:** 40 mA
 - **Inrush:** 15 amps


Time Delay

- 3 or 5 minute fixed, 10 minute adjustable

INSTALLATION

1. Disconnect power.
2. Connect terminals in series with the starting device as shown in the wiring diagram below.
3. Select desired time delay (adjustable models only).
4. Reapply power, check operation.
5. Trickle current bypass resistor T1 to T3 <1K ohm.

TIMING DIAGRAM

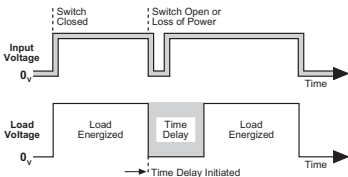

WIRING DIAGRAM

