




Model 210, 310, 410, 610, 613, 810 & 813 Media Installation

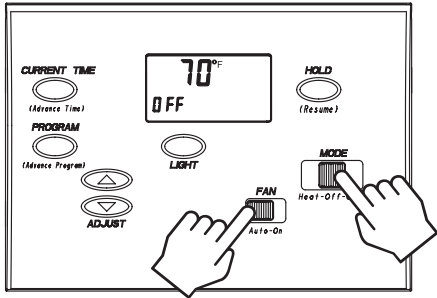


**IMPORTANT: Turn thermostat mode to OFF.
Turn fan to AUTO.**

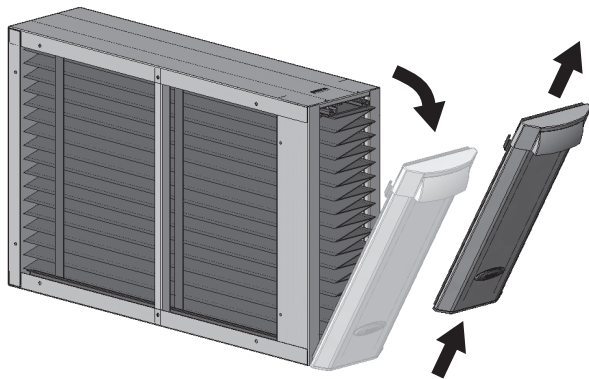

Remove door.


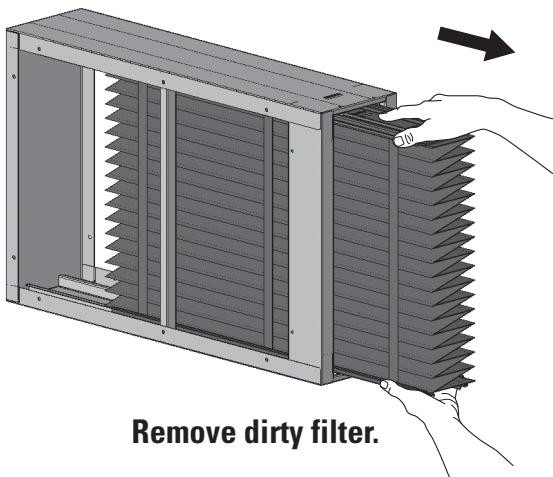


Remove dirty filter.

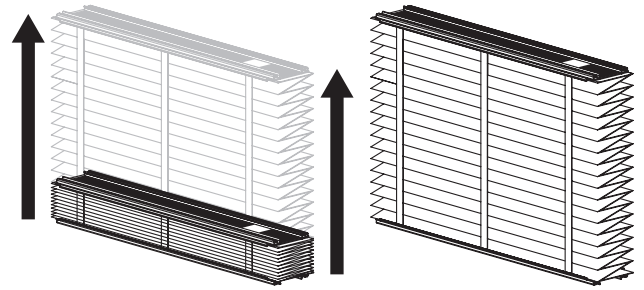


Expand clean filter.

Install filter with Air Flow pointing toward Furnace or Air Handler.

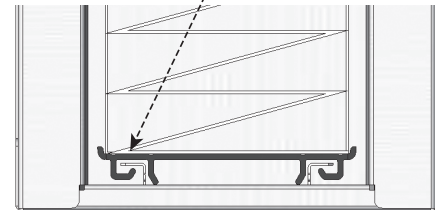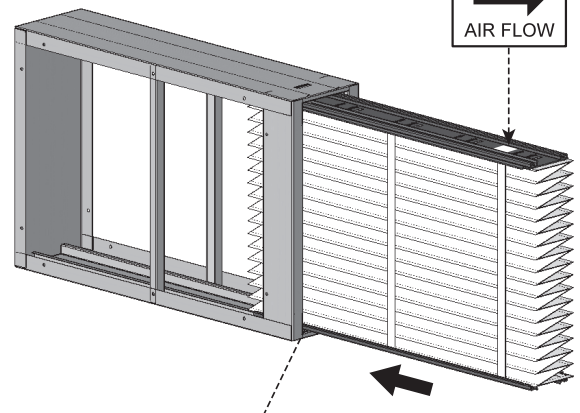

**Align filter in top and bottom rails
and slide into place. Reinstall door.**

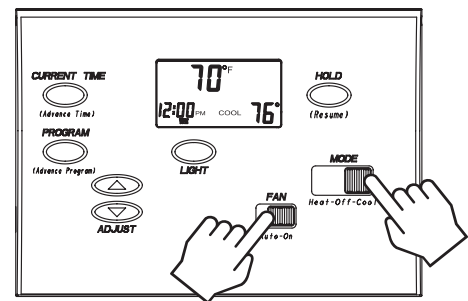

Return thermostat to original settings.