


DRAFT REGULAR -DAMPER SECTION

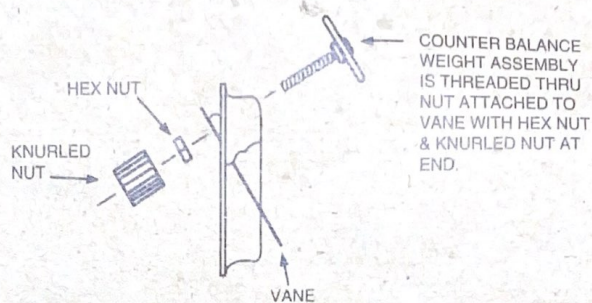

INSTALLATION INSTRUCTIONS

1. BEFORE INSTALLATION, CHECK THAT COUNTER BALANCE WEIGHT ASSEMBLY IS CORRECTLY INSTALLED IN DAMPER AS SHOWN IN ILLUSTRATION.
2. LOCATE THE DRAFT CONTROL AS NEAR TO THE FURNACE OR BOILER AS POSSIBLE. IF THE INSTALLATION HAS A SMOKEPIPE STACK CONTROL, LOCATE THE REGULATOR AT LEAST 18 INCHES AWAY FROM THE STACK CONTROL.
3. FOR THE BALANCING OF WEIGHT ASSEMBLY, TURN "KNURLED NUT" COUNTER CLOCKWISE FOR LESS DRAFT; CLOCKWISE FOR MORE DRAFT.
4. WHEN ADJUSTMENT IS MADE FOR DESIRED DRAFT, LOCK THE "COUNTER BALANCE WEIGHT ASSEMBLY" IN PLACE BY TIGHTENING THE "HEX NUT" LOCATED UNDER THE "KNURLED NUT" AGAINST THE VANE.